

# CONTROL PANEL DG-10

## STANDARD COMMANDS

### Driver Volume

Press the first time: the display blinks and shows the pre-set volume, the other press changes the volume.

### Telephone call control

Press the green for 2 seconds to start a phone call, press the red for 2 seconds to close it.

### To adjust the telephone volume.

Green short press: the right display blinks and shows the pre-set volume. Press Co-driver + and - to adjust the phone volume also during a call. This operation doesn't effect the intercom volumes.

### Left display

When any button is pressed the display shows:  
 '≡' for Stage mode,  
 'r' for Road mode

### Right display

When any button is pressed the display shows the setting of cancellation mode (0..3)

### Co-Driver Volume

Press the first time: the display blinks and shows the pre-set volume, the other press changes the volume.



### Digital active noise cancellation mode

Press the first time: the left display shows 'd', and the right display shows the pre-set noise cancellation mode.  
 0 = digital cancellation off.  
 1 = digital cancellation minimum  
 2 = digital cancellation medium  
 3 = digital cancellation maximum

The second press changes the noise cancellation mode (0..3).

### Stage/Road

A short press changes between Stage and Road mode.

	Stage	Road (2)
Intercom	Active	Active
Videocamera OUT	Active	Active
Radio	NO	Active
Phone	NO	Active

### RCA OUT (Red)

Camera connection

### RCA IN (White)

Radio connection

## ADVANCED COMMANDS

### Camera/Radio out gain

Press '+' for about 3 seconds in order to activate "Camera/Radio out gain setting", then shortly press driver "+" or "-" for adjust the gain.

### Left display

'r' = Road mode selection  
 'C' = Camera/Radio out gain setting  
 't' = Telephone volume setting  
 'b' = Bluetooth audio out setting

### Right display

When you enter in any configuration mode, it blinks showing the value to set

### Bluetooth audio out

Press '+' for about 3 seconds in order to activate "Bluetooth audio out setting", then shortly press driver "+" or "-" for adjust the gain.



### Intercom standby

Press '-' for about 3 seconds in order to switch intercom in standby mode. Press any button about 1 second for turn on the intercom.

### Intercom standby

Press '-' for about 3 seconds in order to switch intercom in standby mode. Press any button about 1 second for turn on the intercom.

### Power supply

The intercom turns on supplying voltage to the power cable ('+' red, '-' black) Range 10-30 Volt. It is recommended that you connect the intercom using the car main switch or a dedicated switch.

### Road Mode Selection

Push down it about 2 seconds in order to activate "Road mode selection", then shortly press it for switch between:

- "Road Mode 1" = Driver doesn't receive radio and phone communications, co-driver does it.
- "Road Mode 2" = Both Driver and co-driver receive radio and phone communications.

# CONTROL PANEL DG-10

## BLUETOOTH COMMANDS

### Bluetooth Turn-on

Normally the Bluetooth auto turns-on together with the intercom. It is possible to switch-on the Bluetooth by pressing the green button for about 5 seconds (if the Bluetooth was previously switched-off).

### Bluetooth LED

Slow blink = BT is on and ready for use  
Fast blink = BT is in pairing mode  
Off = BT is off

### Bluetooth Turn-off

Press the red button for about 5 seconds (until the blue LED is steady) in order to turn-off the Bluetooth system.



### Pairing a telephone

1. Press the green button for about 5 seconds (until the blue LED is steady);
2. Blue LED turns-off
3. Press the green for about 7 seconds (until the blue LED starts to blink fast);
4. Look for DG10 Bluetooth system with your phone;
5. If required, enter PIN code "0000".